



Typical Eroded Tube
(showing wall deterioration)

Cut beyond damaged area
(using internal tube cutter)

Remove damaged section
(using tube stub puller)

Insert New Tube Section
(w/pre-installed coupling extension)

Seal at Face & Coupling
(BoilerPro expand/flare as needed)



World Leader in Hydraulic Tube Expansion

Air Heater Repair #1

Sectional Replacement Method